

STEP 1

Before beginning installation measure the mounting brackets and strips. Verify the dimensions and quantities of hardware with enclosed packing list. Verify the correct number of strips. See **"Determining Quantity of Strips"** to calculate the number of strips for your opening.

STEP 2

After unpacking the mounting bar, separate the front mounting bracket "B" (See Figure 2) from the rear mounting bracket "A" (See Figure 2). Place mounting bracket "A" into the appropriate position (wall for wall mount, bottom inside of header for in jamb mount) and secure using the supplied #10 X 1" Pan Head Mounting Screws. To maintain proper distance from finished floor, the bottom of the mounting bracket should mount 1/2" higher than strip length, i.e.: strip is 90", bottom of the mounting bracket should be 90 1/2" from finished floor (See Figure 1).

NOTE: Rear mounting bracket "A" must be installed in the jamb header, or on the wall, prior to attaching the vinyl strips.

STEP 3

NOTE: See **"Strip Installation"** section (Page 2) before proceeding through Step 3.

Attach strips to pins, measuring between each strip for proper overlap (See Figure 3, Page 2). Last strip may need to be trimmed for in jamb mount (See Figure 1). If necessary, trim strips to a bottom edge height of 1/4" to 1/2" above finished floor (See Figure 1).

STEP 4

Secure front mounting bracket "B" to rear mounting bracket "A" with supplied washers and lock nuts (See Figure 2).


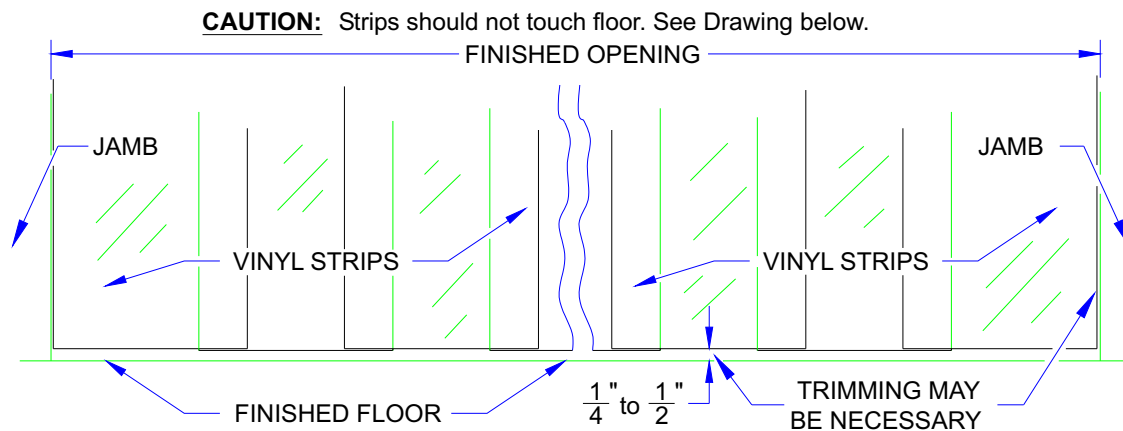



Figure 1

Econo Track Installation Instructions

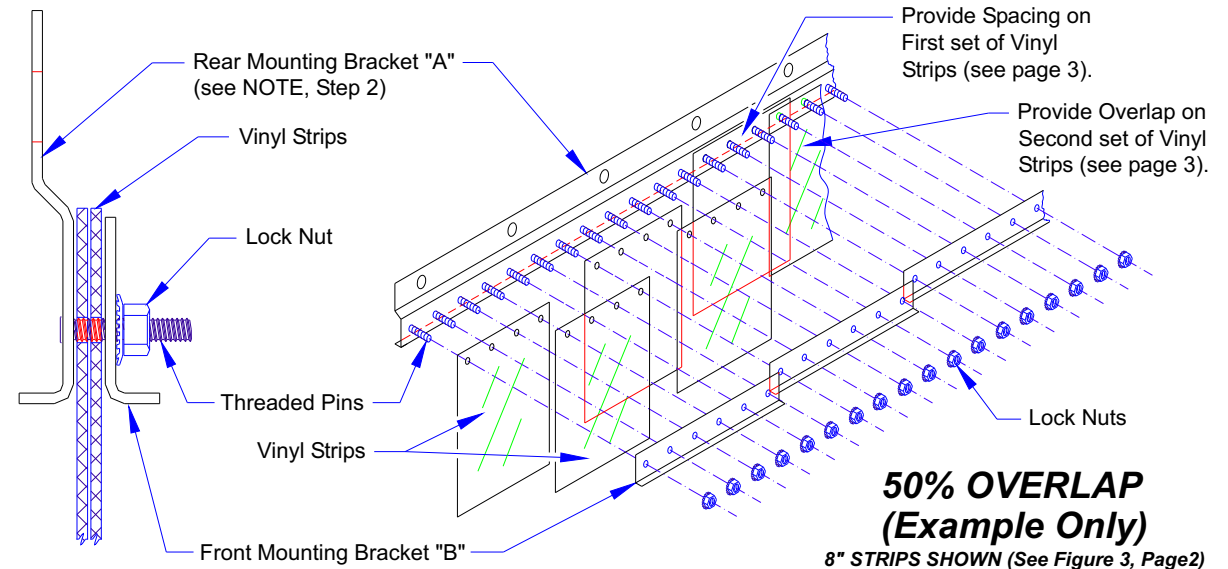

END VIEW

STRIP DOOR ASSEMBLY
FOR FLAT WALL MOUNT ONLY

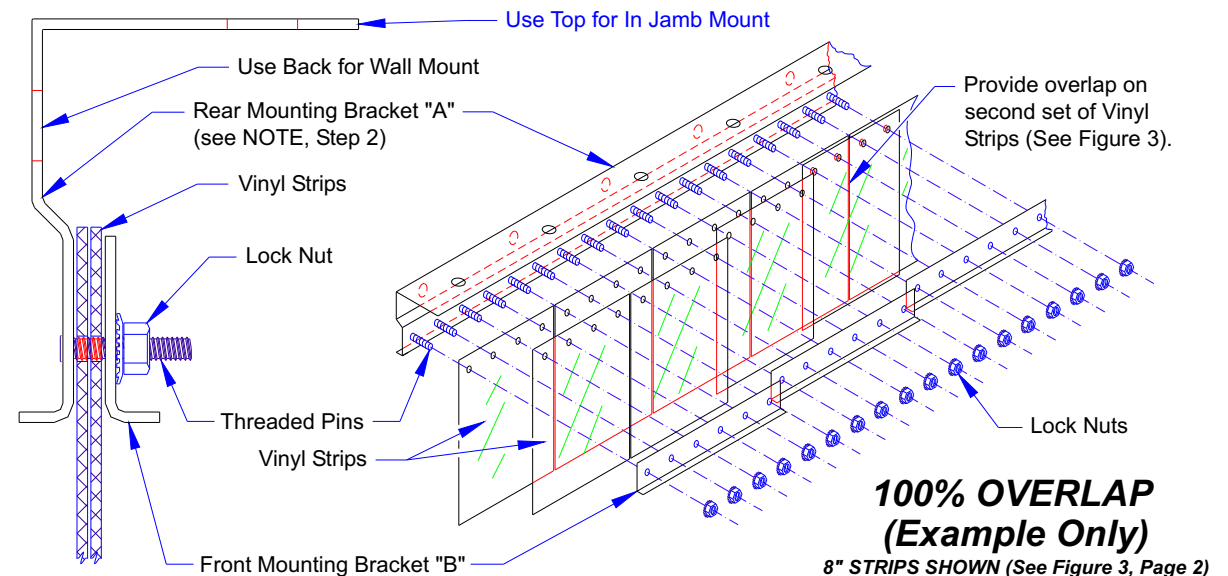

END VIEW


STRIP DOOR ASSEMBLY
UNIVERSAL MOUNT FOR FLAT WALL OR IN JAMB

Figure 2

DETERMINING QUANTITY OF STRIPS


IMPORTANT: The following are examples ONLY! Your Size, Model and Overlap Spacing may vary!

100% OVERLAP

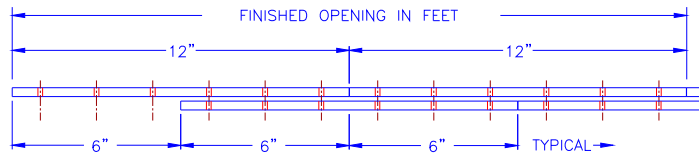


WITH **12" STRIPS** @ 100% OVERLAP, 2 STRIPS ARE REQUIRED FOR EVERY ONE FOOT OF OPENING.

50% OVERLAP

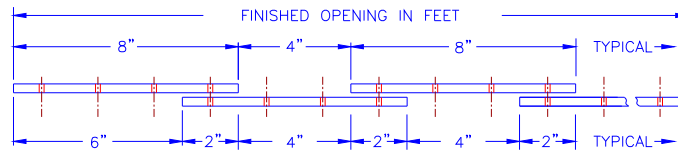


WITH **8" STRIPS** @ 50% OVERLAP, 2 STRIPS ARE REQUIRED FOR EVERY ONE FOOT OF OPENING.


33% OVERLAP

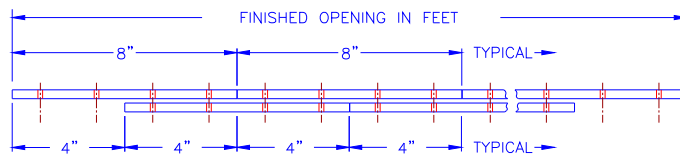


WITH **8" STRIPS** @ 100% OVERLAP, 3 STRIPS ARE REQUIRED FOR EVERY ONE FOOT OF OPENING.

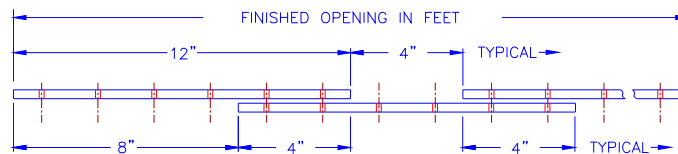

WITH **12" STRIPS** @ 100% OVERLAP, 3 STRIPS ARE REQUIRED FOR EVERY TWO FOOT OF OPENING.

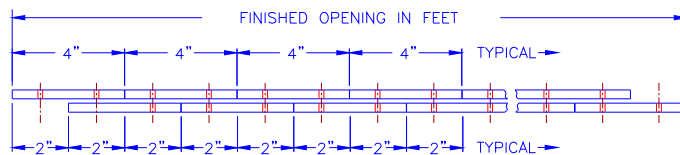

WITH **4" STRIPS** @ 100% OVERLAP, 6 STRIPS ARE REQUIRED FOR EVERY ONE FOOT OF OPENING.

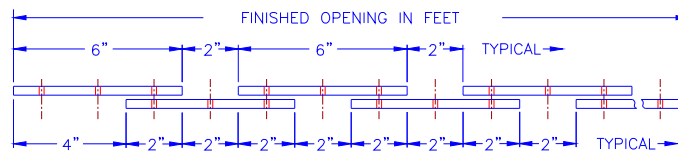

WITH **6" STRIPS** @ 33% OVERLAP, 3 STRIPS ARE REQUIRED FOR EVERY ONE FOOT OF OPENING.

Figure 3

STRIP INSTALLATION

To install strips, start at the end of the mounting bracket "A", slip vinyl strips over threaded pins allowing for desired overlap (See Figure 3).

The last strip may not maintain the exact strip overlap. However, adjustment of the last strip can be made in either direction which will place the edge of the strip flush against the side of the jamb or cause it to curl against the jamb. Trimming the width of the last strip is also an option. Use a straight edge and a utility knife, a new blade works best.

STRIP MAINTENANCE

To clean strip, wash with a mild household detergent. Do not use abrasive powders, solvents or strong caustic detergents or compounds.

Should strips frost up in cooler/freezer applications, periodic spraying of the strips with auto windshield deicer will help reduce the build-up.

Do not allow strips to drag on the floor.

For safety, badly scratched or otherwise damaged strips which impare vision, should be replaced.